

Disassemble Swenor Frontwheel.

Frontwheel all skis. (+rearwheel tristar and skate)



1. Loosen the nuts on the wheel, and take the wheel off.



2. Remove the washers on both sides.



3. Add the wheel on the brick, and hit the front axle with rubber hammer.



4. Bearing on the opposite side is included.




5. Turn the wheel around and take out the opposite bearing with a punch.



6. Add a thin layer of grease on the side walls for the bearing. Place the 1. bearing with help of the sleeve.



7. Turn the wheel around and insert the front axle..

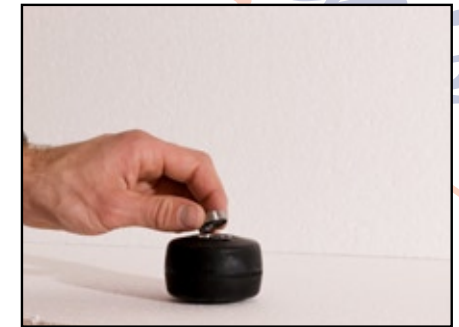

8. Add a bearing into the front axle.



9. Place the 2. bearing inside with help of the sleeve.



10. Put washers on both sides. Put on bolt and nut.



11. Place your skis up down in a couple vices. Make shure the wheel is right in the slot. Tightening hard.



12. Make a few light punches on each side of the wheel bolt as tensions in the wheel release, and the wheel rolls freely.