



Set the direction of Swenor rollerskis.

The wheel system of Swenor rollerskis are simple and solid. You easy change the direction of the ski by hiting the wheel bolt. The best is to hit toward the interior, hiting to hard outwards can cause the aluminium fork to break.


Send the skis over a plane surface. Send them 3-4 meters, and look at the direction of the ski. Use a straight stroke to easyer se the direction.

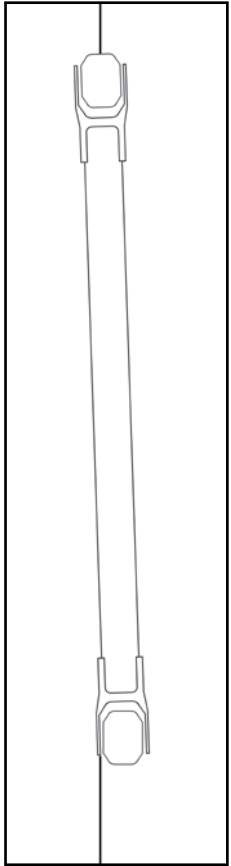


Rear wheel force out to the right.
Hit like the picture below.

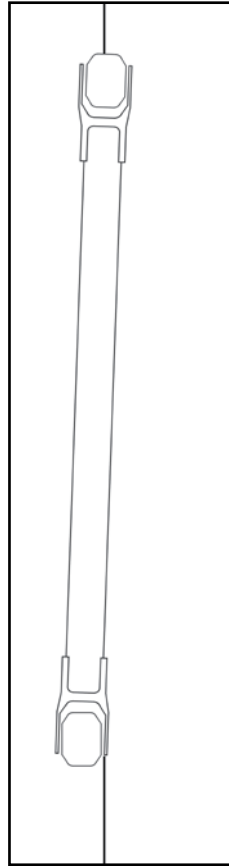

Rear wheel force out to the left.
Hit like the picture below.

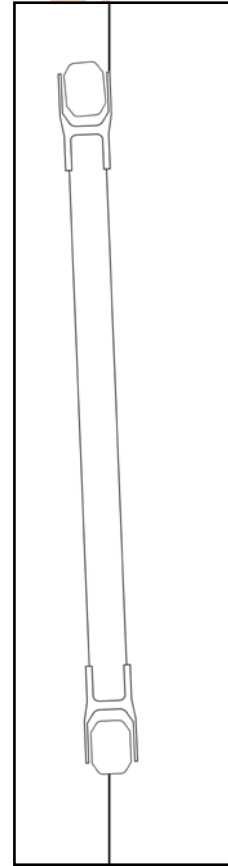

Front wheel force out to the left.
Hit like the picture below.

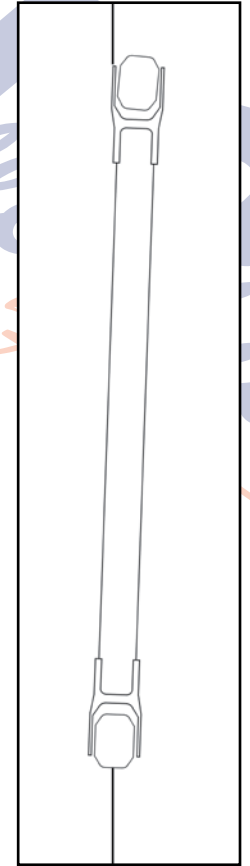

Front wheel force out to the right.
Hit like the picture below.

